## I. Charging function

Charging function allow vessel operator to recharge batteries while sailing or using other propulsion on the boat (hybrid system). *NOTE: E-Tech drives cannot be operated as generators and propulsion at the same time.* 

To start charging batteries using E-TECH drives as generators, please follow this steps:

- move throttle to neutral position,
- turn ignition key to ON position,
- turn ON charging switch (indicator light will appear when ON)1,
- when indicator light will appear and charging switch is in ON position move throttle forward slightly to start charging. (NOTE: throttle position is not related to charging power! Throttle need to be slightly forward, pushing throttle to maximum position will not increase charging performance. <u>Maximum forward throttle position might be dangerous for operator if</u> <u>charging key will be turned OFF unintentionally motor will start working as a propulsion)</u>,
- good job! Your batteries are charging<sup>2</sup>.

## !DO NOT TURN OFF CHARGING FUNCTION WHEN THROTTLE IS NOT IN NEUTRAL POSITION!

To stop charging batteries using E-TECH drives generator function, please follow this steps:

- move throttle to neutral position,
- turn charging switch into OFF position,
- good job! Your E-TECH drives is ready to work as propulsion system.

Charging function should be turned OFF when batteries are fully charged, otherwise E-Tech controller will turn OFF itself showing *OVERVOLTAGE error*.

If propeller makes too much drag while charging function is ON please contact E-Tech.

<sup>&</sup>lt;sup>1</sup> Charging switch is ON or OFF position, switch will stay in desired position until switching it ON or OFF again.

<sup>&</sup>lt;sup>2</sup> Charging performance is only related to propeller RPM (<u>not</u> throttle position).